



Micca Speck G2 User's Manual



Got a Question or Need Help?

Email our technical support team at: support@miccatron.com for personalized assistance with the setup and use of this product. Please visit our product information website www.miccatron.com for the following:

- Firmware Updates
- User's Manuals
- Troubleshooting Wizard
- Technical Support Request


Warranty: 1 Year

Copyright © 2019 Micca All rights reserved.
This manual may not be reproduced in whole or in part without
permission for any purpose other than personal use.

V. Playing Movies and Videos

To browse and view movies and videos:

1. From the home menu, select the **Movies** icon and press **<OK>** on the remote to begin browsing for movies.
2. Select which storage device to browse for movies in: USB Drive, Memory Card, and Optical Drive. Highlight the desired device and press **<OK>**.
3. Select which partition of the drive to browse for movies in. Most drives have only one partition. Highlight the appropriate partition and press **<OK>**.
4. All folders and compatible movie files found will be displayed. If no folders or compatible movie files are found, a message will pop up indicating "No Compatible Files Found!"
5. To browse thin a folder, highlight the folder and press **<OK>**. To back out of a folder, press the **<RETURN>** on the remote.
6. To play a movie, highlight the movie and press **<OK>**.

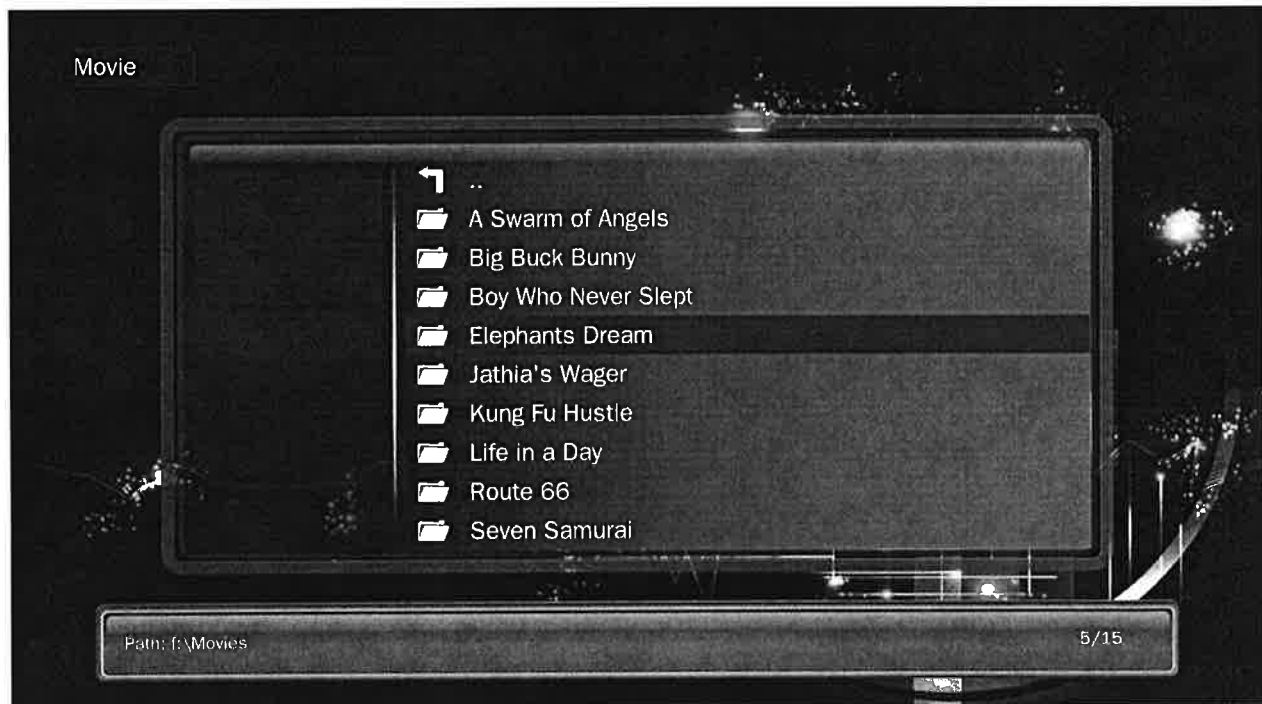

NOTE: Only files with compatible video file extensions MKV, AVI, TS/TP, MP4/M4V, MOV, VOB, PMP, RM/RMVB, MPG, M2TS, and WMV are visible in the file/folder

directory. Video files with incompatible file extensions will not be visible. Video files with compatible file extensions but incompatible codec will generate an error when played.

During playback of a movie, the following remote control operations are available:

Button	Description
MUTE	Mute all sound output.
MENU	Bring up the on-screen menu.
◀◀	Rewind - Available speeds are 1x, 2x, 4x, 8x.
▶▶	Fast Forward - Available speeds are 1x, 2x, 4x, 8x.
◀◀	Previous File - Play the previous file.
▶▶	Next File - Play the next file.
 	Play/Pause - Pause or resume the current file.
■	Stop playing the current file.
OK	Display information about the current file.
HOME	Go back to the home menu.
RETURN	Stop playing the current file.
16:9/4:3	Aspect Ratio - Available modes are Default, 4:3, 16:9, Fit View, Video Full Screen, Screen Full Screen.
GOTO	Jump to a specific time in the video; use the arrow buttons to enter the time and press <OK> to jump to the entered time.
REPEAT	Changes video playback sequence between Repeat All, Repeat One, Random.
AUDIO	Change the audio track, if multiple audio tracks are available.
SUBTITLE	Turns subtitles on or off. Use the on-screen menu to change subtitle track.
VOLUME	Adjust the audio volume.